

ScanStone Separators

16/11/11

Changing Settings on Canbus Control Box

To access settings:-

Hold the **page** button and then press the **Self Centre Steering** button.


After a short delay the first settings page appears.

Release the **Steering** button first.

Each press of the set button will step through the various pages.

Press the **Self Centre Steering** button once to exit setting mode.

Setting Pages

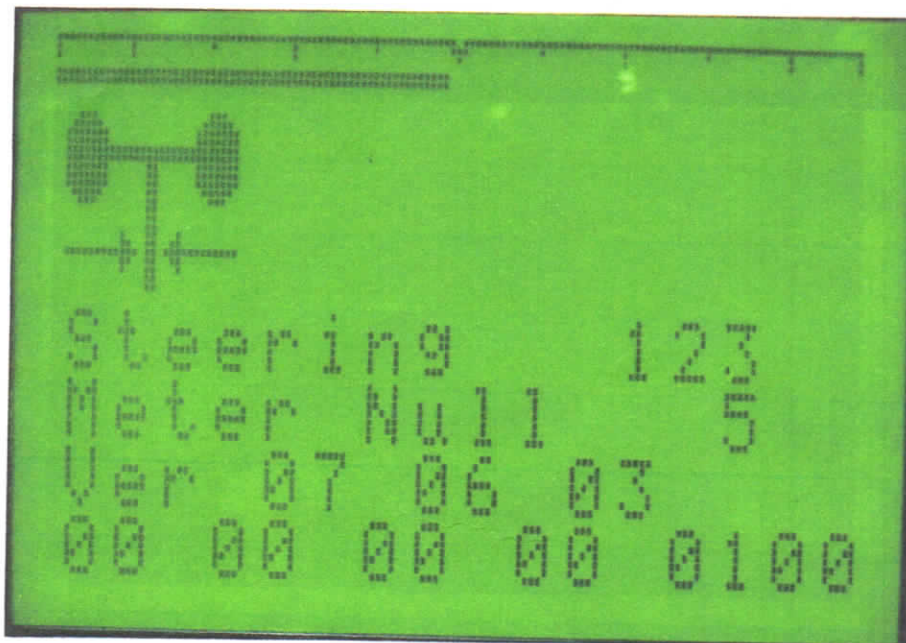

Page 1 - Steering

Align the Steering and then switch the hydraulic oil OFF before entering Settings Mode.

Steering Mid-point - Joystick 3 - right (XCONV) to save position

Steering Meter adjust - Joystick 3 - up/down (PRESSURE) to adjust meter offset

Typical Value
110-130

TO EXIT

- PRESS SELF CENTRE STEERING TO EXIT.